




PERMIT BOX

POST & POST SPIKE INSTALLATION

- 1) INSTALL SPIKE STRIKE INTO TOP OF POST SPIKE
- 2) HAMMER SPIKE ALL THE WAY INTO GROUND
- 3) REMOVE SPIKE STRIKE AND STORE IN BACK OF PERMIT BOX
- 4) ASSEMBLE POST

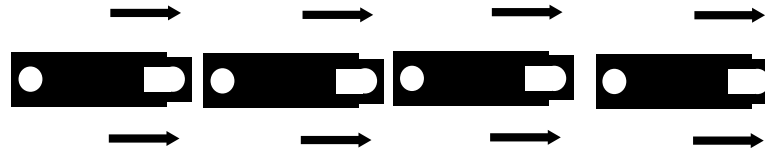

- 5) MOUNT PERMIT BOX
NOTE: MOUNT POST & POST SPIKE ON LEVEL GRADED GROUND. DO NOT SET UP ON AN ANGLE OR ATTEMPT TO DRIVE POST SPIKE INTO HARD OR ROCKY GROUND WITHOUT LOOSENING SOIL FIRST.

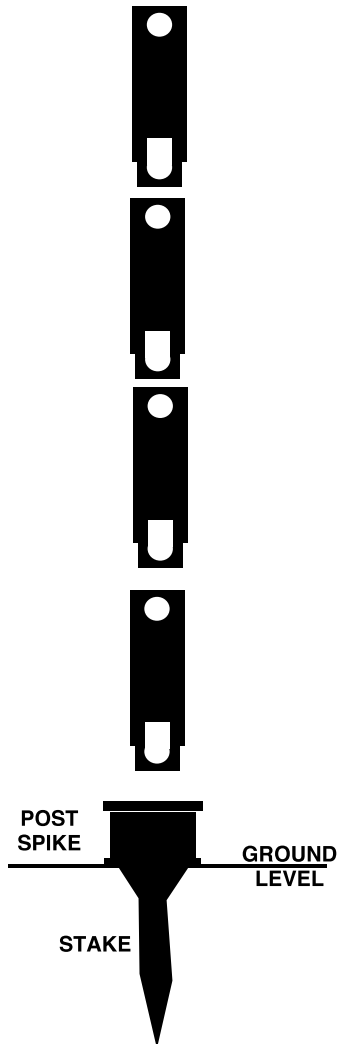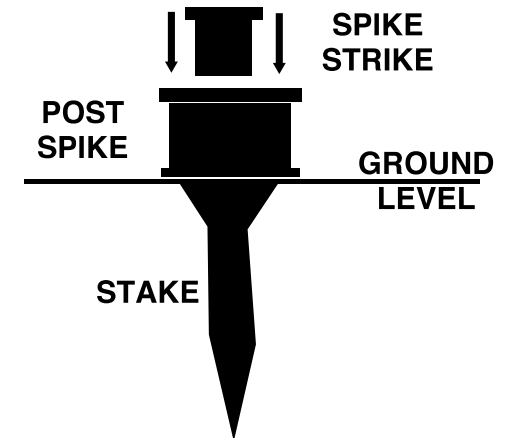

4 X 4 POST ADAPTER ASSEMBLY

- 1) INSERT LONG NARROW END OF ADAPTER INTO BOTTOM OF PERMIT BOX. **PUSH** ADAPTER ALL THE WAY IN UNTIL HOLE IN ADAPTER LOCKS IN PLACE.
- 2) PLACE PERMIT BOX AND LARGE END OF ADAPTER OVER TOP OF 4 X 4 POST (POST NOT SUPPLIED) SECURE WITH DESIRED NUMBER OF SCREWS

